



ELCO Lighting

Innovation Beyond Expectation

ELCO Lighting
3" Knife Edge Wood Ceiling Trim
EL3WCR
Installation Instructions



WARNING:

Risk of electric shock. Before installation, disconnect power to the luminaire. Failure to do so may result in electric shock and lead to injury or death.

Risque de choc électrique. Avant l'installation, débranchez l'alimentation au luminaire. Ne pas le faire peut entraîner un choc électrique et entraîner des blessures, voire la mort.

CAUTION:

For your safety, read and understand instructions completely prior to installation. Installation requires knowledge of luminaire electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.

Pour votre sécurité, lisez et comprenez entièrement les instructions avant l'installation. L'installation nécessite une connaissance du système électrique des luminaires. Si vous n'êtes pas qualifié, NE PAS tenter l'installation. Contactez un électricien qualifié si nécessaire.

NOTE: Before beginning the installation, carefully unpack and identify all parts. **Save these instructions as you may need them at a later date.**

This item has tight tolerances, cutouts should be made accurate and precise.

NOTE: When using Standard or Architectural Koto™ Modules, use EL386ICA or the appropriate double-walled E3LK series housing. For Koto™ Canless or Koto™ MAX, installer may optionally use the 3" plaster frame.


DISCLAIMER: ALL FRAMES MUST BE INSTALLED IN MIN. 1/2" DRYWALL PRIOR TO WOOD INSTALLATION.

**** IF NOT USING DRYWALL BEHIND WOOD, FRAMES MUST BE LIFTED 1/2" ****

Wood Ceiling Trim Installation Instruction:

Step 1

Unscrew collar and remove from the housing.

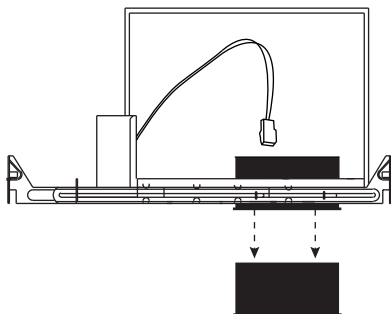


Step 2

Ceiling opening on wood material should be 3 1/2" diameter (3 1/16" Max.)


Disclaimer :

Opening hole should be precise

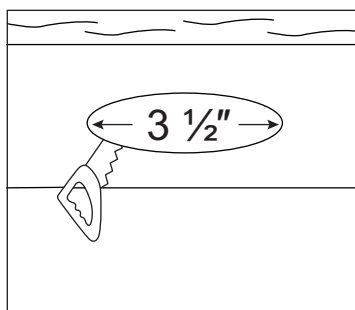


Step 3

Install wood adaptor (EL3WCR) with mounting clips upwards into recessed housing

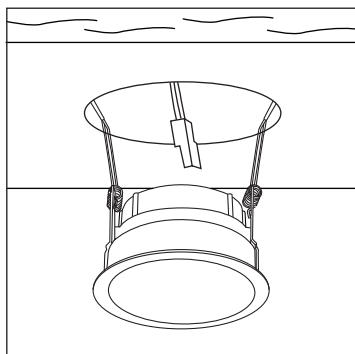

Step 4

Install Koto™ Module and trimless reflector (ELK315) using twist-on mechanism

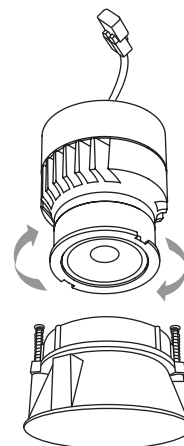

Step 5

Mate the connector on Koto Trimless assembly with the connector from recessed housing. Follow by inserting Koto Trimless assembly into the wood adaptor for a flush trimless finish.

