



WARNING:

Risk of electric shock. Before installation, disconnect power to the luminaire. Failure to do so may result in electric shock and lead to injury or death.

Risque de choc électrique. Avant l'installation, débranchez l'alimentation au luminaire. Ne pas le faire peut entraîner un choc électrique et entraîner des blessures, voire la mort.

CAUTION:

For your safety, read and understand instructions completely prior to installation. Installation requires knowledge of luminaire electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.


Pour votre sécurité, lisez et comprenez entièrement les instructions avant l'installation. L'installation nécessite une connaissance du système électrique des luminaires. Si vous n'êtes pas qualifié, NE PAS tenter l'installation. Contactez un électricien qualifié si nécessaire.

NOTE: Before beginning the installation, carefully unpack and identify all parts. **Save these instructions as you may need them at a later date.**

Koto™ Module to Trims and Recessed Housing Installation Instruction:

Step 1

Install Koto™ Module and trim using twist-on mechanism.

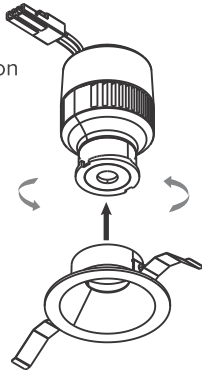

Step 2

Mate the connector on module with the connector from recessed housing. Follow by inserting module with trim assembly into housing.

